

QUICKTRONIC PROFESSIONAL 5

ECG for FL 16 mm



Product family features

- Supply voltage: 220...240 V
- Line voltage: 198...264 V
- Line frequency: 0 Hz | 50 Hz | 60 Hz
- Lamp start with optimum filament preheating
- Lifetime: up to 100,000 h (temperature at $T_c = 65^\circ\text{C}$, max. 10 % failure rate)
- Energy Efficiency Index EEI: A2 BAT
- Automatic shutdown of defective lamps and at end of life (EoL T.2)
- Safety: to EN 61347-2-3
- Lamp operation: to EN 60929

Product family benefits

- Long lamp life
- No adverse effect from frequent on/off switching
- Perfect lamp start for applications with motion sensors
- Automatic restart after lamp replacement
- VDE/VDE EMC certified system
- Very high energy efficiency due to cut-off technology

Areas of application

- Emergency lighting systems acc. to EN 50172 / DIN VDE 0108-100
- Industry
- Open-plan offices, corridors and storage rooms
- Public buildings
- Sports halls and factories
- Strip lighting
- Suitable for emergency lighting (DC operation)
- Modernization of existing systems
- Suitable for luminaires of protection classes I and II

Product family datasheet

Technical data

	Electrical data				Light technical data	Dimensions & weight
Product description	Input voltage AC	Nominal voltage	Mains frequency	Input voltage DC	Starting time	Length
QTP5 2X49	198...264 V	220...240 V	50...60 Hz	176...276 V	10 s ¹⁾	3600 mm

					Temperatures & operating conditions	Lifespan
Product description	Width	Height	Mounting hole spacing, length	Product weight	Ambient temperature range	ECG lifetime
QTP5 2X49	300 mm	210 mm	350.0 mm	24000 g	-20...+50 °C	100000 h ²⁾

	Capabilities		Certificates & standards	
Product description	End of lamp life safety shutdown	Suitable for fixtures with prot. class	Approval marks – approval	EEI – Energy Label
QTP5 2X49	EOL T.2	I / II	VDE / VDE-EMC / ENEC 10 / CE	A2 BAT


		Logistical data	Environmental information Information according Art. 33 of EU Regulation (EC) 1907/2006 (REACH)	
Product description	Protection class	Commodity code	Date of Declaration	Primary Article Identifier
QTP5 2X49	III	85041080900	02-06-2023	4008321329431

Product description	Candidate List Substance 1	CAS No. of substance 1	Safe Use Instruction	Declaration No. in SCIP database
QTP5 2X49	Lead	7439-92-1	The identification of the Candidate List substance is sufficient to allow safe use of the article.	348520b8-7da9-467e-9d89-b30bdf51ad73

¹⁾ If there is a temporary interruption in the power supply (< 0.5 s), the lamp will start within 0.3 s

²⁾ At T_{case} = 65°C at T_C point / 10% failure rate

Product family datasheet

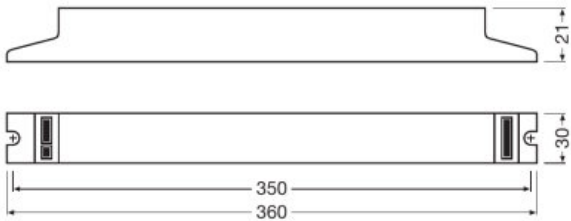

505257_QTP5 1x80 and QTP5 2x14-49

Application advice

For more detailed application information and graphics please see product datasheet.

Additional product information

- In order to achieve good radio interference suppression:1. Keep the cable between ECG and lamp as short as possible.2. The single lamp wires must be routed as close as possible to each other, whereas the lines of the different lamp ends must be routed separately.

Sales and Technical Support

Sales and Technical Support www.osram.com

Country specific information

Product description	Product code	METEL code	SEG-No.	STK number	UK Org
QTP5 2X49	4008321329431	OSRQTP52X49	-	4030210	-
QTP5 2X49	4008321329431	OSRQTP52X49	-	4030210	-

Download Data

File	
	User instruction QUICKTRONIC QTP5
	Product Datasheet 334048_QUICKTRONIC PROFESSIONAL – QTP5

Product family datasheet

	Product Datasheet 502688_ECG lifetime - QUICKTRONIC non DIM
	Certificates 335002_EMC-Marks approval
	Certificates 335097_INOTEC
	Certificates 335098_CEAG
	Certificates 335101_ENEC-VDE-Marks approval
	Certificates 335128_VDE Quality Tested Simplified luminaire approbation
	Certificates 335169_Manufacturer's declaration – LampECG combinations: Frequent switching
	Certificates 592319_EAC certificate for Quicktronics QT
	Declarations of conformity QUICKTRONIC CE 3364256 060923
	CAD data 3-dim 313485_360x30x21 9900024
	CAD data 3-dim 313490_360x30x21 9900024
	CAD data 3-dim 314282_360x30x21 9900024
	CAD data PDF 313392_360x30x21 9900024

Ecodesign regulation information:

Separate control gear and light sources must be disposed of at certified disposal companies in accordance with Directive 2012/19/EU (WEEE) in the EU and with Waste Electrical and Electronic Equipment (WEEE) Regulations 2013 in the UK. For this purpose, collection points for recycling centres and take-back systems (CRSO) are available from retailers or private disposal companies, which accept separate control gear and light sources free of charge. In this way, raw materials are conserved and materials are recycled.

Logistical Data

Product code	Product description	Packaging unit (Pieces/Unit)	Dimensions (length x width x height)	Volume	Gross weight
4008321329431	QTP5 2X49	Shipping carton box 20	385 mm x 160 mm x 100 mm	6.16 dm ³	4971.00 g

The mentioned product code describes the smallest quantity unit which can be ordered. One shipping unit can contain one or more single products. When placing an order, for the quantity please enter single or multiples of a shipping unit.

Disclaimer

Subject to change without notice. Errors and omission excepted. Always make sure to use the most recent release.